




Toyota Digital Key – Owners Guide




SETTING UP YOUR DIGITAL KEY

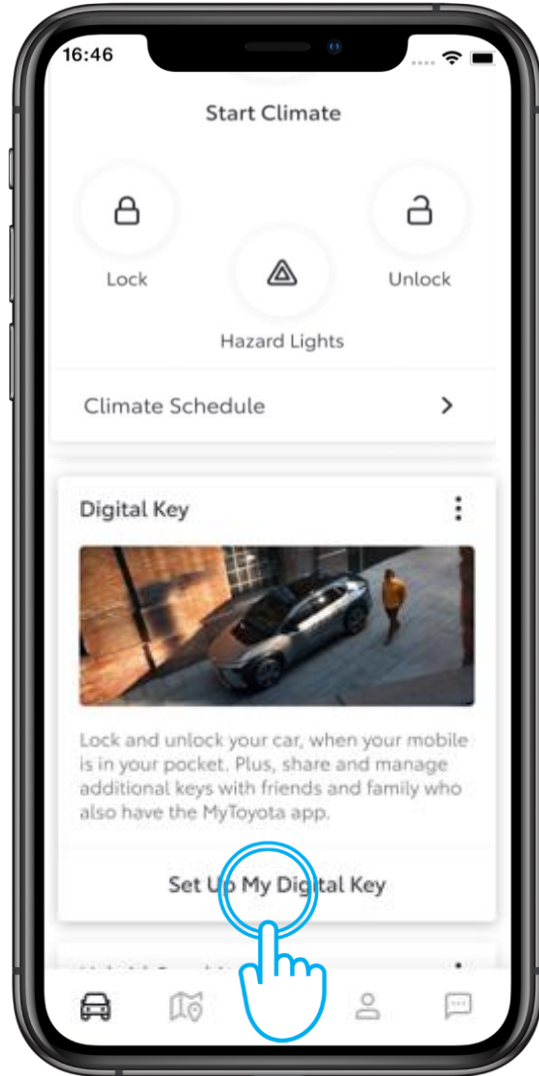

STEP 1

From the MyToyota app home screen, tap “Set Up My Digital Key”.

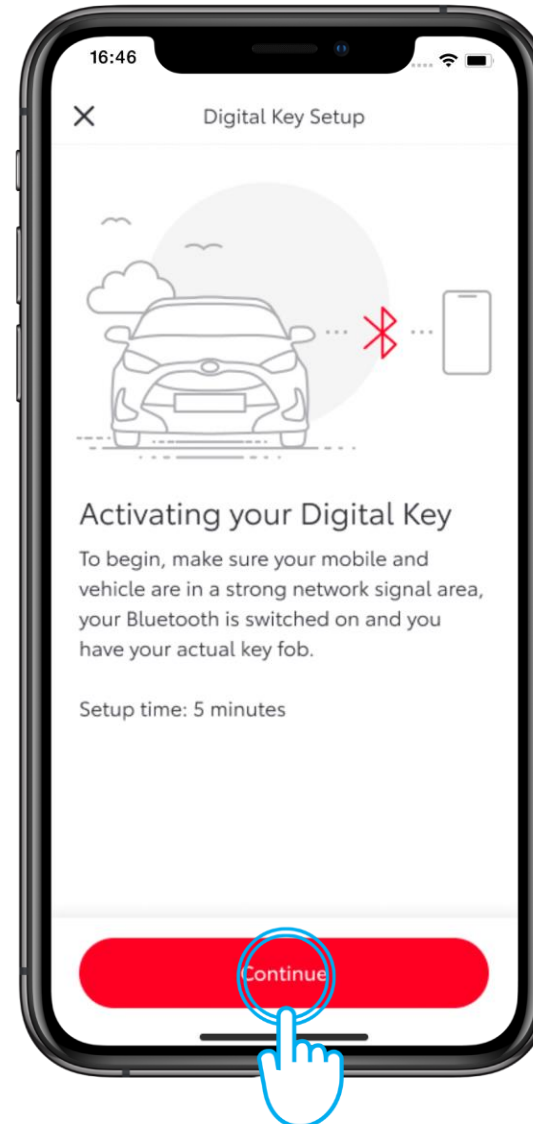


STEP 2

The setup process will begin.
Tap “Continue”.




SETTING UP YOUR DIGITAL KEY

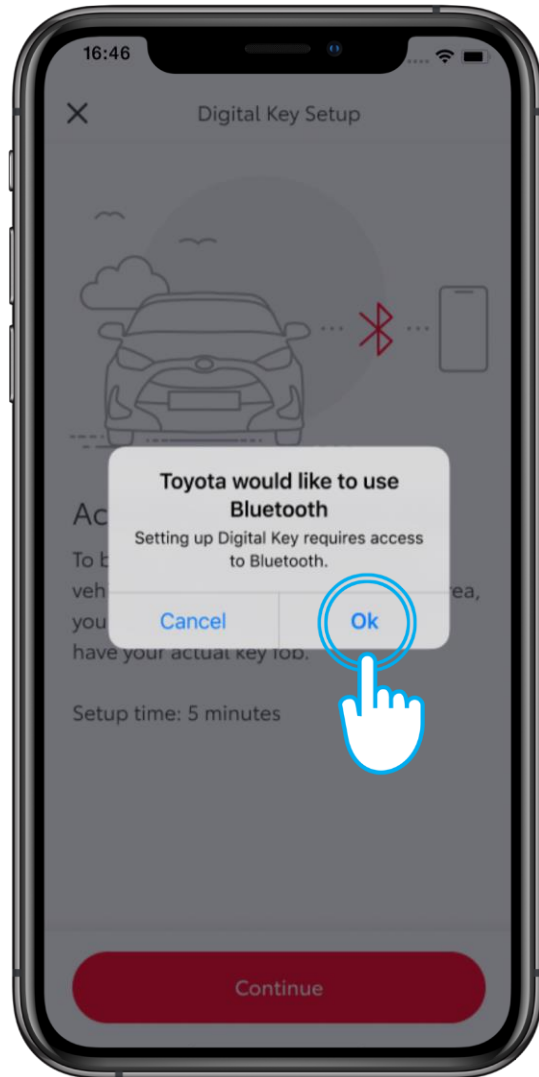

STEP 3

Bluetooth access is required to setup Digital Key.

Tap Ok.

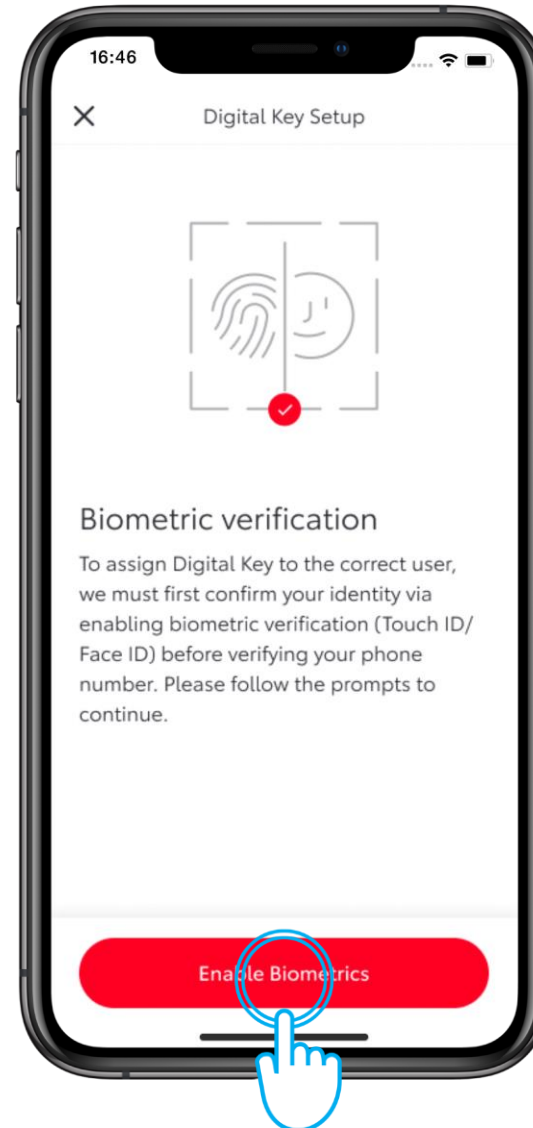


STEP 4

The app uses biometric verification to confirm your identity.

Tap "Enable Biometrics".



SETTING UP YOUR DIGITAL KEY

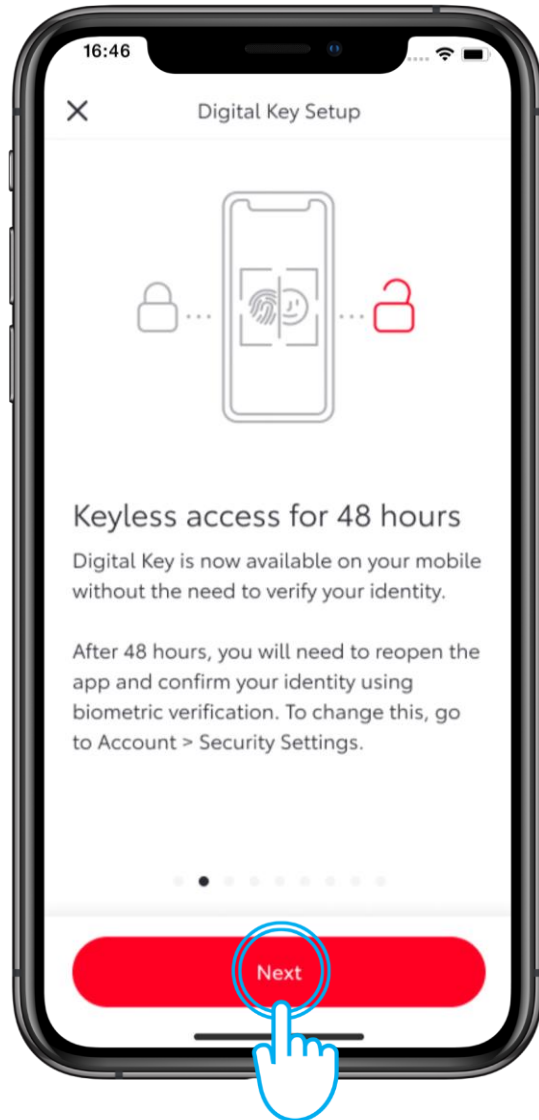

STEP 5

For 48 hours, you can now gain keyless access without the need for verifying your identity.

Tap Next to verify.




STEP 6

A 6-digit code will be sent to the phone number associated with your app account.

Enter the code and tap Continue




SETTING UP YOUR DIGITAL KEY

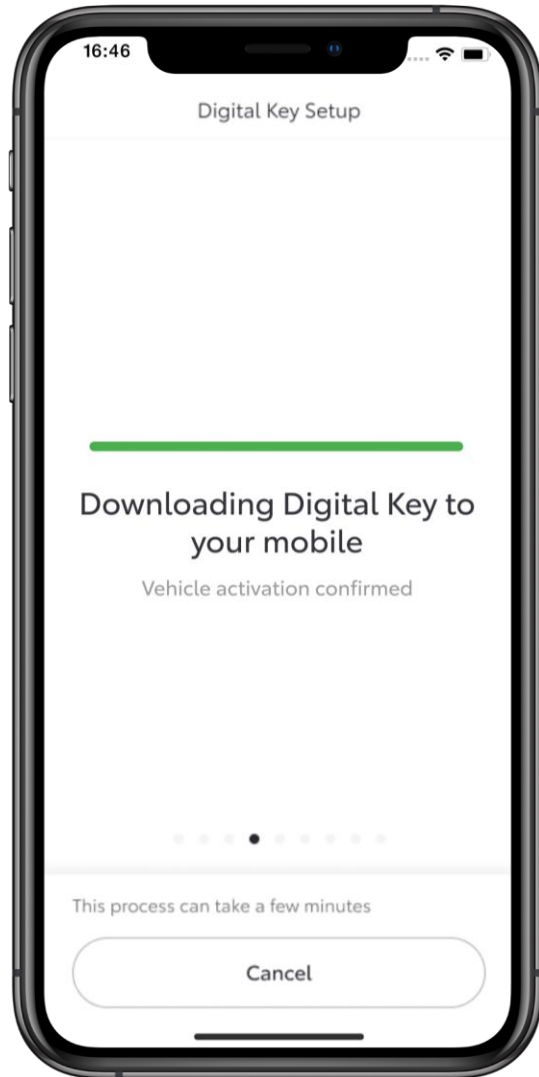

STEP 7

Digital Key downloads automatically.

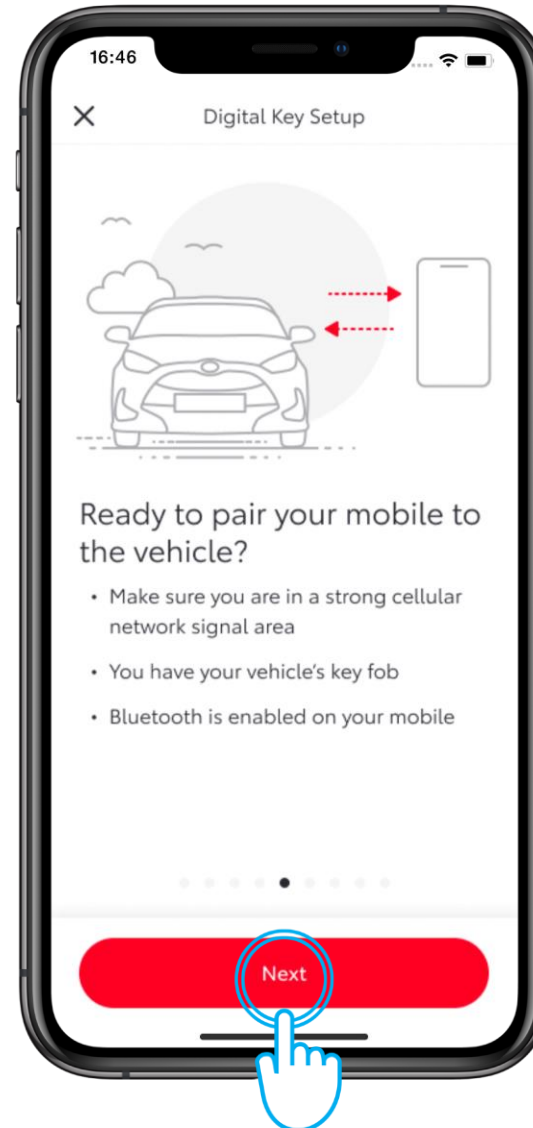


STEP 8

When pairing to your phone, make sure Bluetooth is enabled, you are in a strong cellular network area, and you have your key fob with you.

Tap "Next".




SETTING UP YOUR DIGITAL KEY

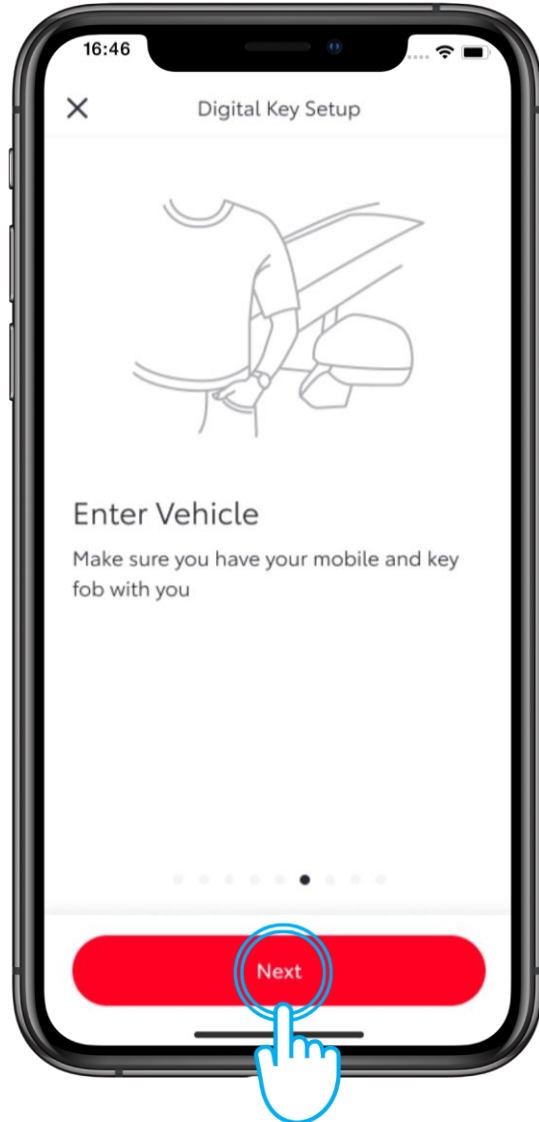

STEP 9

Enter your vehicle making sure you have your key fob with you.

Tap "Next".

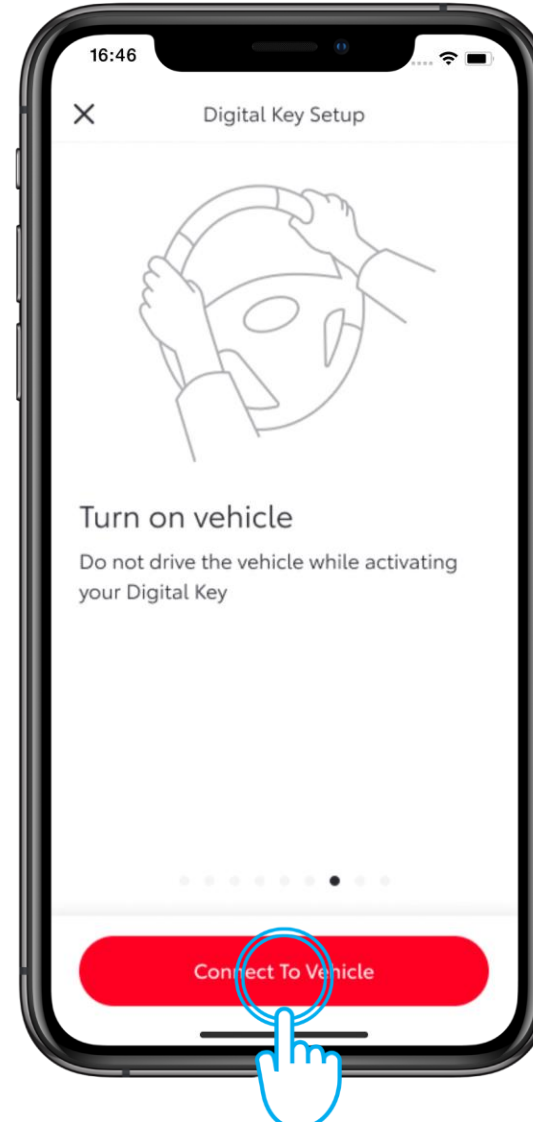


STEP 10

Turn on your vehicle. Follow the onscreen instructions.

Tap "Connect To Vehicle".




SETTING UP YOUR DIGITAL KEY

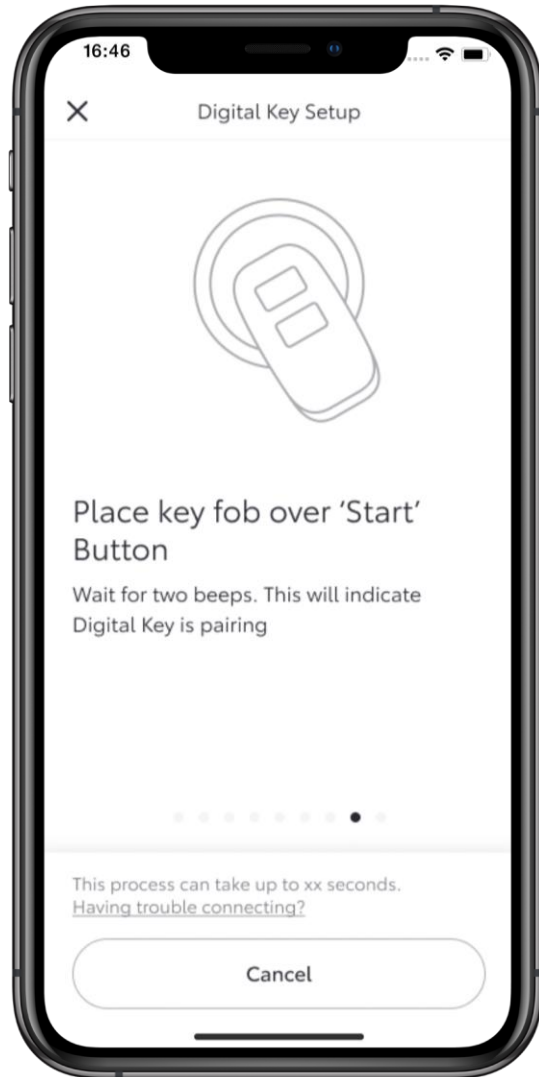

STEP 11

Place the physical key over the Start button and wait to hear two beeps.

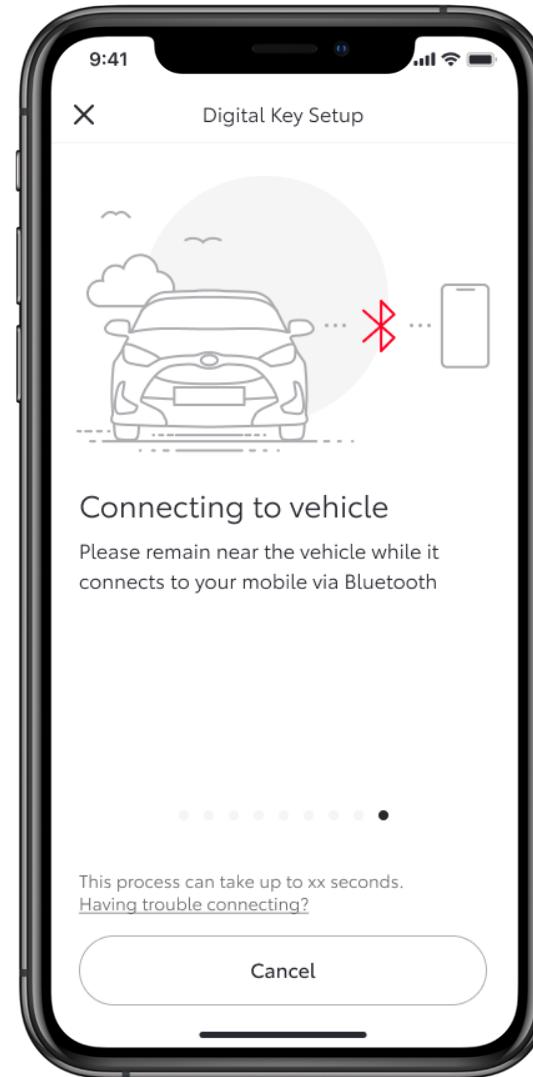


STEP 12

Bluetooth will now begin pairing with your device and the vehicle.

Please note, Bluetooth pairing for Digital Key is different to establishing a Bluetooth connection to the vehicle's multimedia screen.



SETTING UP YOUR DIGITAL KEY

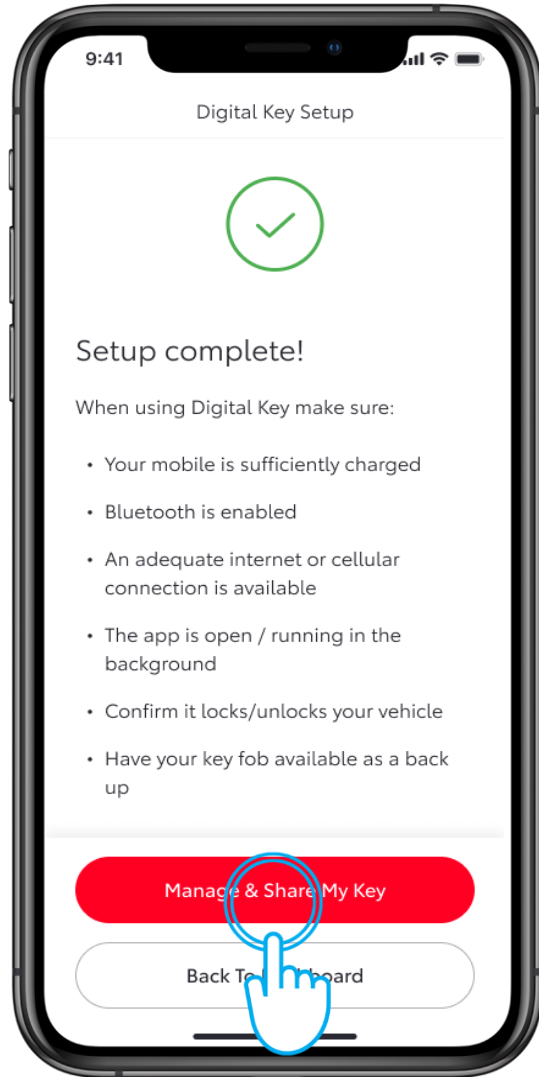

STEP 13


The app will confirm when the set up has finished.

You can now manage and share your Digital Key.

Tap “Manage & Share My Key”.




MANAGING AND SHARING YOUR DIGITAL KEY

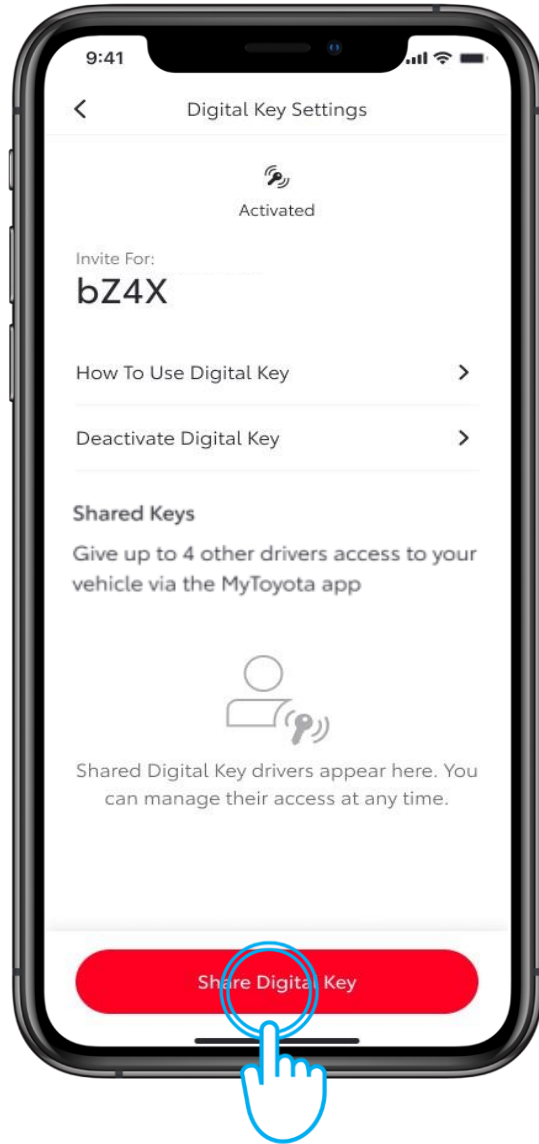

STEP 1

Tap on "Share Digital Key".

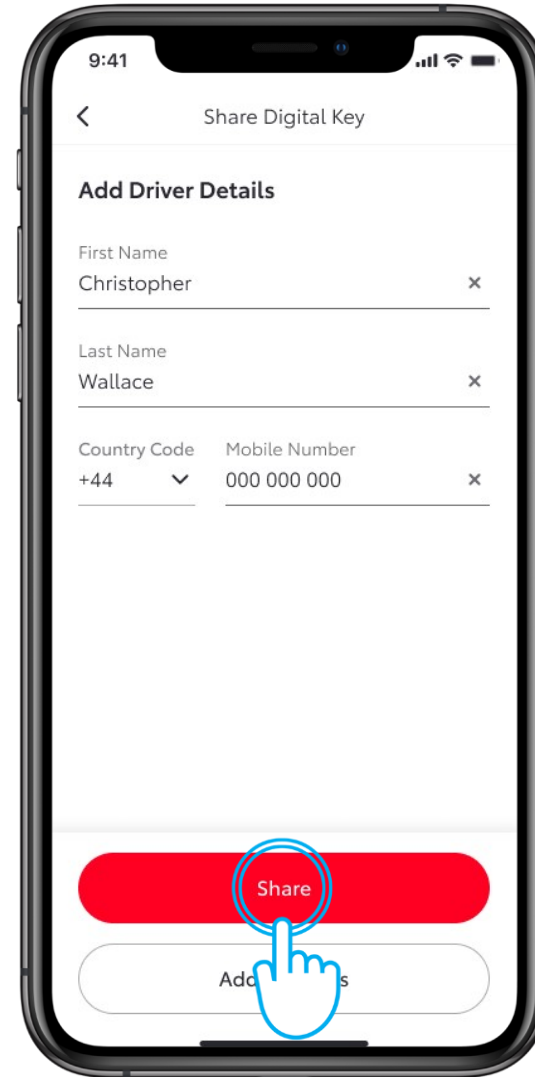


STEP 2

Add a person's details from your contacts or manually enter their information.

Tap "Share".




MANAGING AND SHARING YOUR DIGITAL KEY

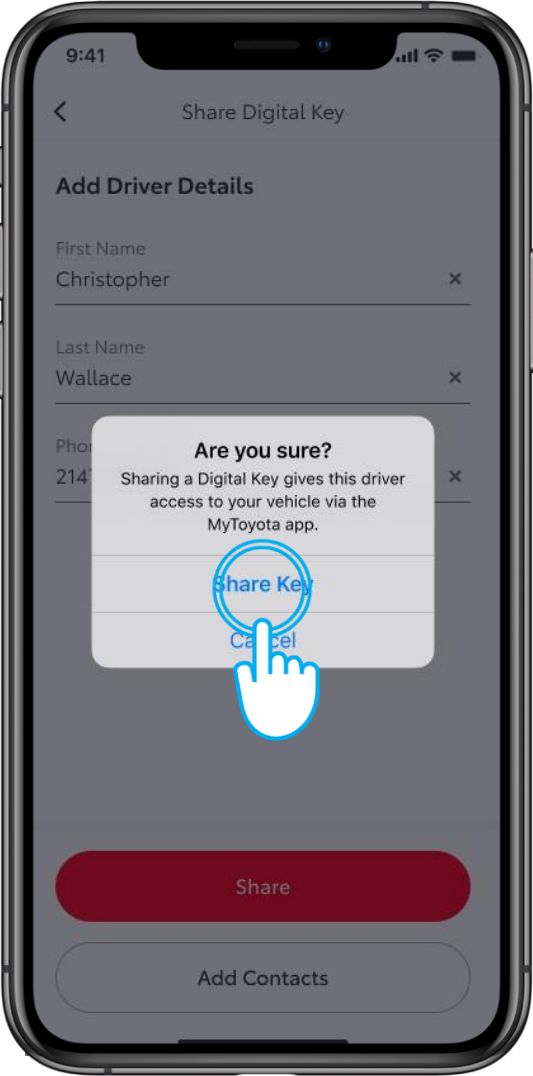

STEP 3

To confirm that you wish to give access to your vehicle tap on “Share Key”.

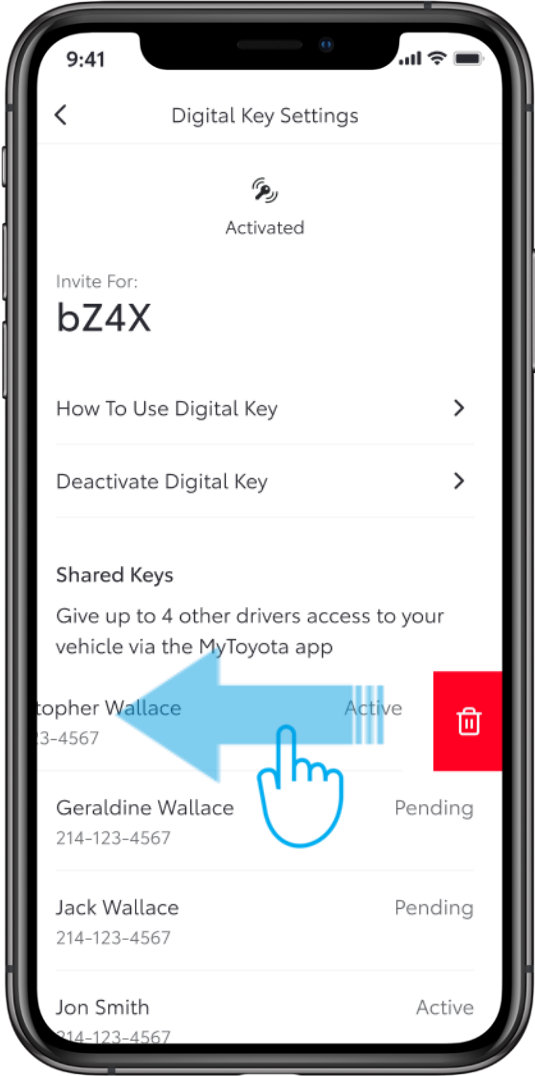


STEP 4

To deactivate a shared key, swipe left on the person’s name.




REMOVING YOUR DIGITAL KEY

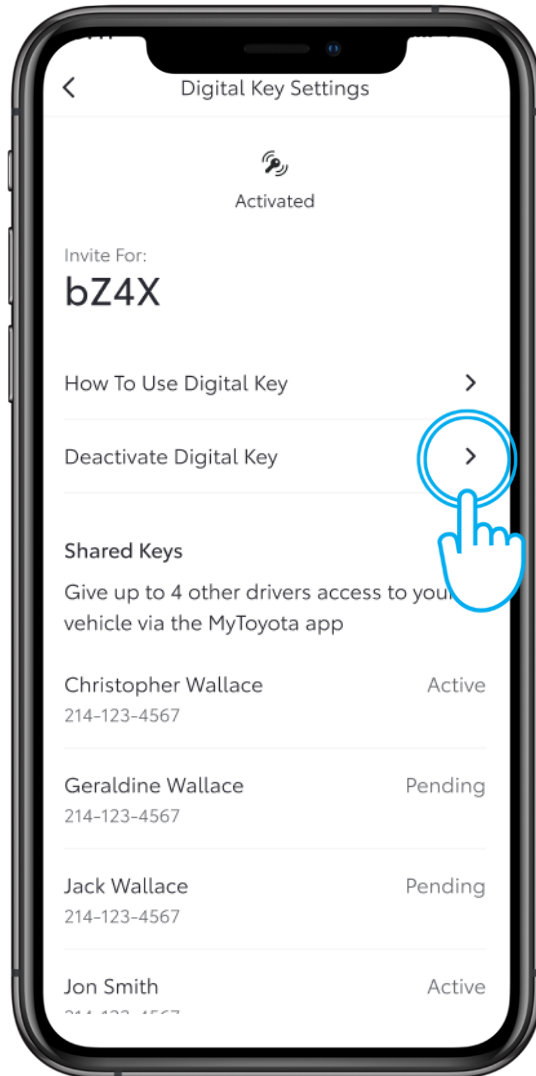

STEP 1

You can also remove your Digital Key. This also removes ALL shared keys too.

Tap “Deactivate your Digital Key”.

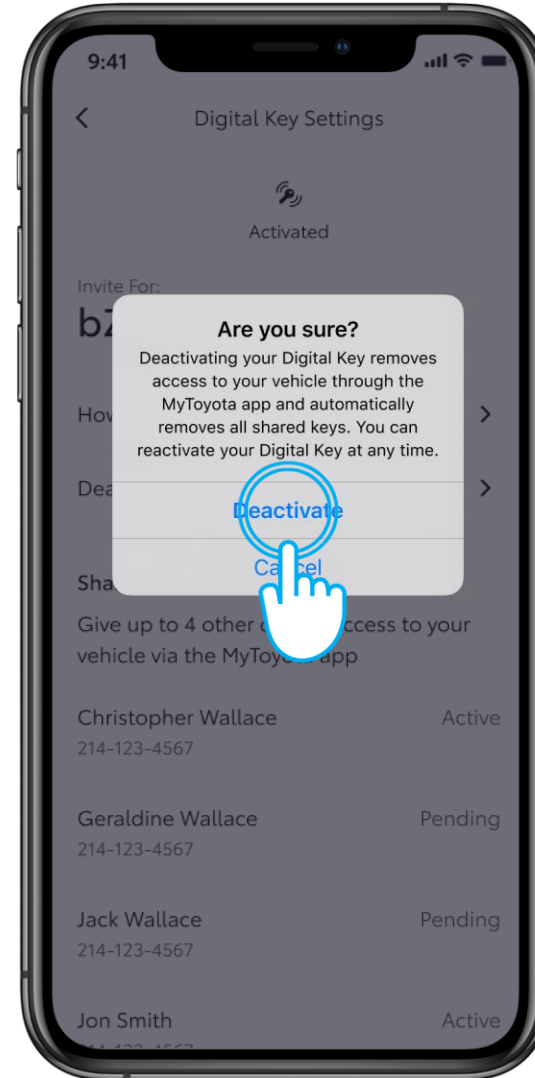

STEP 2

Tap “Deactivate” to confirm that you wish to deactivate your digital key.

Note: The engine start function of the Smart Digital Key will not operate if your vehicle is equipped with an additional immobiliser device, and if the immobiliser key is not present inside the vehicle (same as the physical key).



EVERY FEATURE COUNTS

*Connected Services are continually improving, therefore visuals and app screens in this guide may slightly differ from those seen in your MyToyota App.

